

magnetic door stop to Hold Open Door



S4A-34A

What is electromagnetic door stopper?

Electromagnetic door holders and releasers keep doors open until they are released by fire-alarm systems, remote smoke detectors, or other switching devices. They provide a high holding force. In the event of a power failure, they release the door to a closed position to keep the facility secure.

How do you remove a magnetic door stopper?

Removing the Old Magnetic Door Stop Use a screwdriver to loosen the screws until they come off. Remove the entire catch assembly and put them aside.

Next, work on the magnetic door stop installed on the wall trim. Remove the screws, pull off the device, and set it aside.

Specifications

Model:	34A
Applicable door type:	wooden door, fire door, framed door
Input voltage:	12V factory, 24V adjustable
Working current:	12V/170mA, 24v/85mA
Maximum suction power:	60-90 (KG)
Dust cover:	Yes
Power-off button:	Yes
Installation scenarios:	ground installation, wall installation
Material:	Copper wire

Dimensions

